




ASSEMBLY INSTRUCTIONS

Easy Cube


BM363602S3C


Fully Assembled

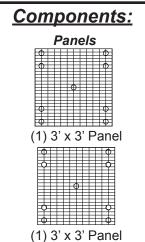


open hole sockets Legs: (4) 36"



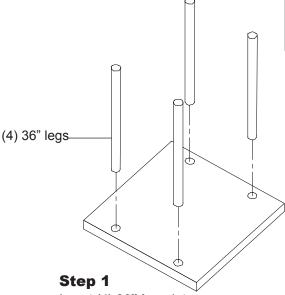

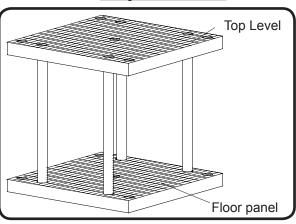

Insert (4) 36" legs into Floor Panel (open hole socket)

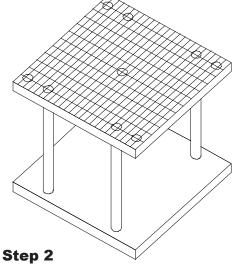

Next, slide (1) Top Panel (closed hole sockets) on 36" legs. Make sure panel is pushed all the way down as shown.