




CW962402L

ASSEMBLY INSTRUCTIONS

2 SHELF WALL UNIT - 96"

Components Required for Assembly

Panels:

(1) Floor Panel
(open hole sockets)(1) 2nd Level Panel
(closed hole sockets)(1) 1st Level Panel
(closed hole sockets)

Legs:


(8) 24"

(15) 12"

Accessories:

Oil and Sponge

Fully Assembled

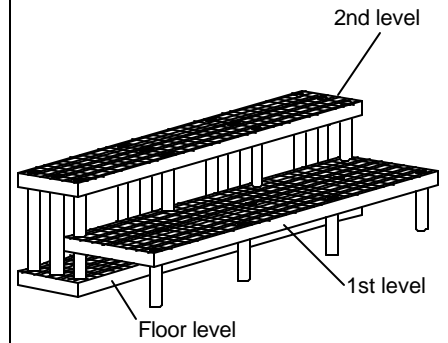

All sockets must be oiled
before assembly




Check All
Components

Step 1

Floor level

Place floor panel (**open hole sockets**) in position and insert (4) 12" and (8) 24" legs as shown. (Make sure legs go through to ground).

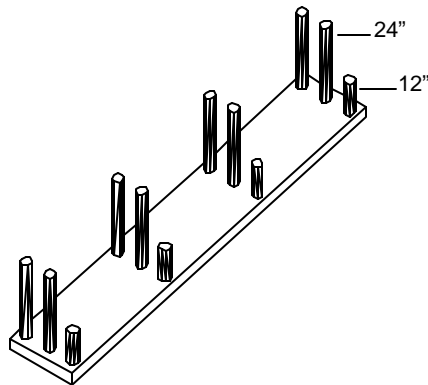


(7) 12" legs

Inverted view of
panel

Step 2

1st level

Invert 1st level panel (**closed hole sockets**) and insert (7) 12" legs in middle and outside rows of sockets as shown. Next return panel to upright position and place on (4) 12" legs in floor panel.

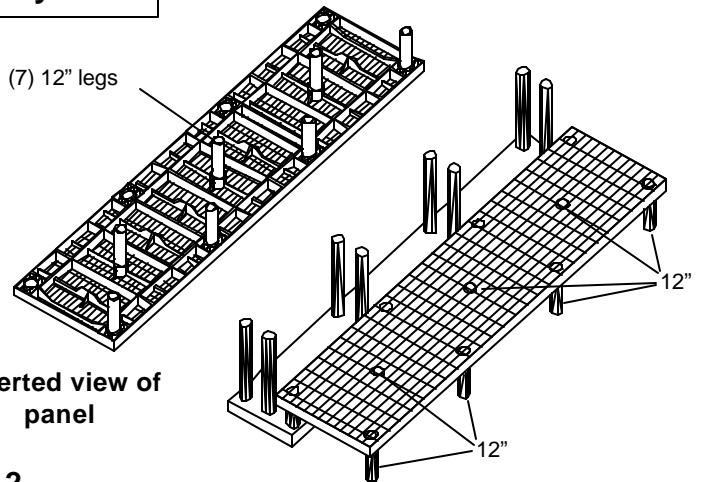

(4) 12" legs

Inverted view of
panel

Step 3

2nd level

Invert 2nd level panel (**closed hole sockets**) and insert (4) 12" legs in outside row of sockets. Next return panel to upright position and place on (8) 24" legs in floor panel.

